



PLATINUM





 










S E R I E S


PLW-15

  Set Up Guide



1 Key

-  = Auto Timer
-  = Audio Visual
-  = Caution
-  = Equaliser Graphic Interface
-  = Factory Default Setting
-  = For Advanced Operations only
-  = Low Frequency Enhancement
-  = PLW-15 Manual Page Reference
-  = No
-  = Stereo
-  = User Setting
-  = Volume
-  = Volume Adjustment
-  = Yes
-  = 12v Trigger


 Please read all the safety information in the manual before proceeding to connect and power up your PLW-15



2 Connecting your PLW-15



Using a Stereo / 2 Channel Amplifier
Refer to page 5

Rear panel view

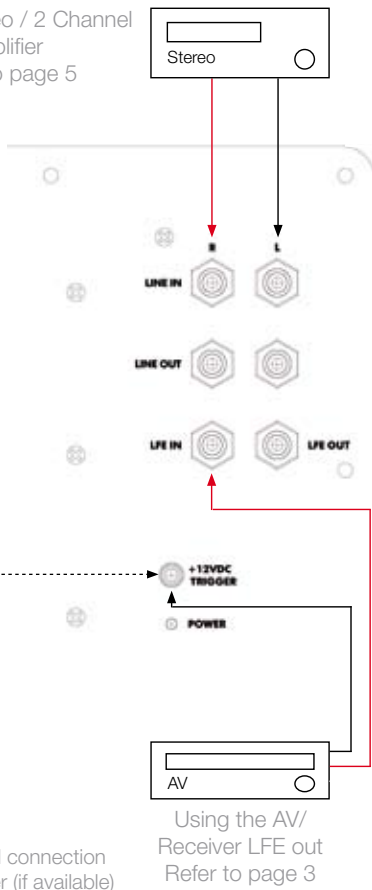


3 Rear Panel View

3a

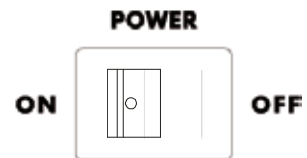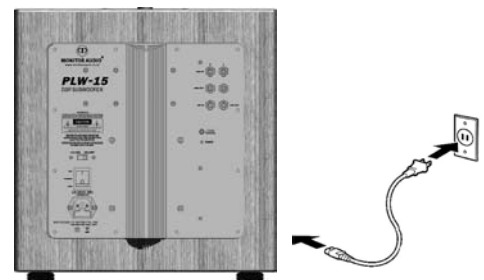

3b



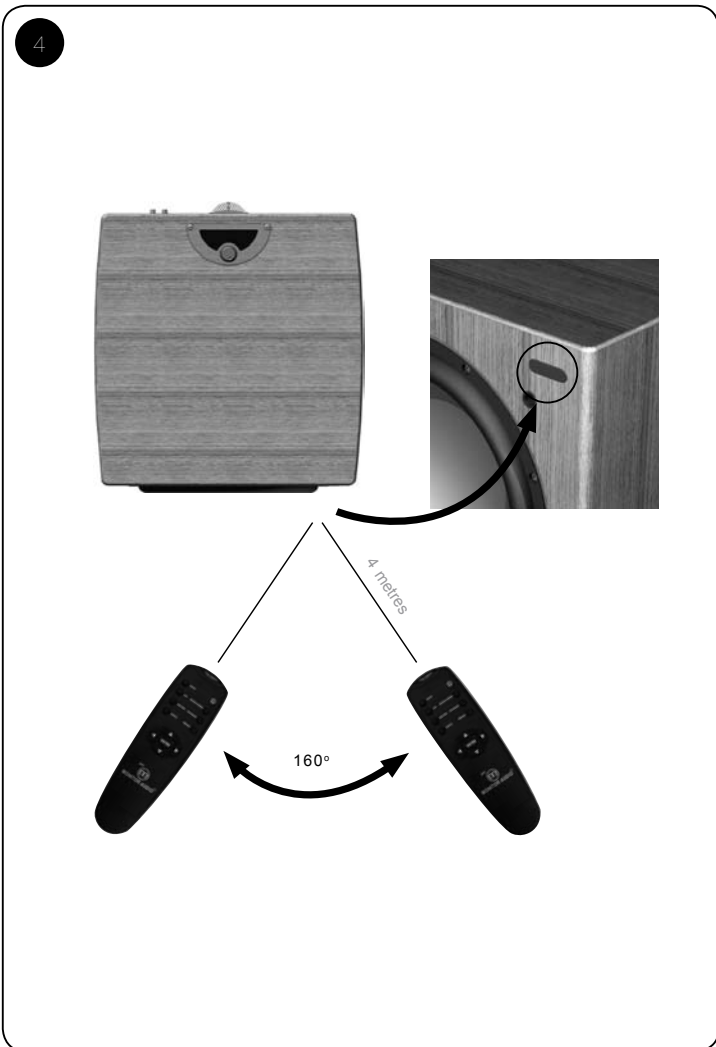

5 Initial Setup -
Using the 4 Factory Pre-Sets


- MOVIES
- MUSIC
- IMPACT
- DYNAMIC

} Factory pre-set EQ settings

Refer to your AV Amplifier/Receiver manual to set up the appropriate crossover settings on your AV/Receiver


9

6 Remote Control Handset and Control Panel



EQ FACTORY SETTINGS

- MUTE x 1 = ON
x 2 = OFF
- LFE x 1 = Inp (STEREO)
x 2 = LFE (AV)
- MOVIES x 1 = Movi
x 2 = USER
- MUSIC x 1 = Musi
x 2 = USER
- IMPACT x 1 = Impa
x 2 = USER
- DYNAMIC x 1 = Dyna
x 2 = USER
- NIGHT MODE x 1 = Nigh ON
x 2 = Nigh OFF
- STAND BY x 1 = OFF (STAND BY)
x 2 = ON (POWER UP)
- EXIT

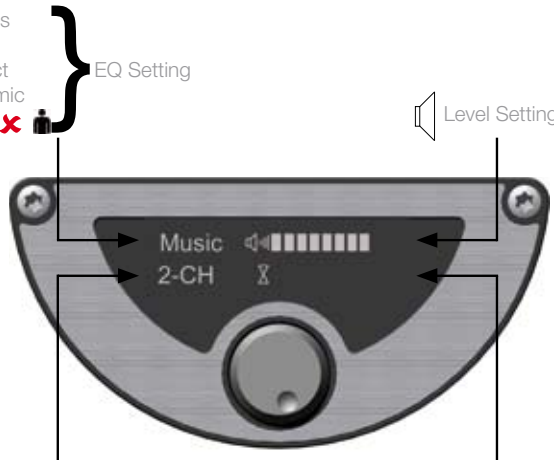

Movies
Music
Impact
Dynamic
User

} EQ Setting

Level Setting

LFE / Input

Graphic Output Level

Music 2-CH


For Basic Operations

OR

7-8



Advanced Set-up for LFE Input Connection Functions & Operations Overview

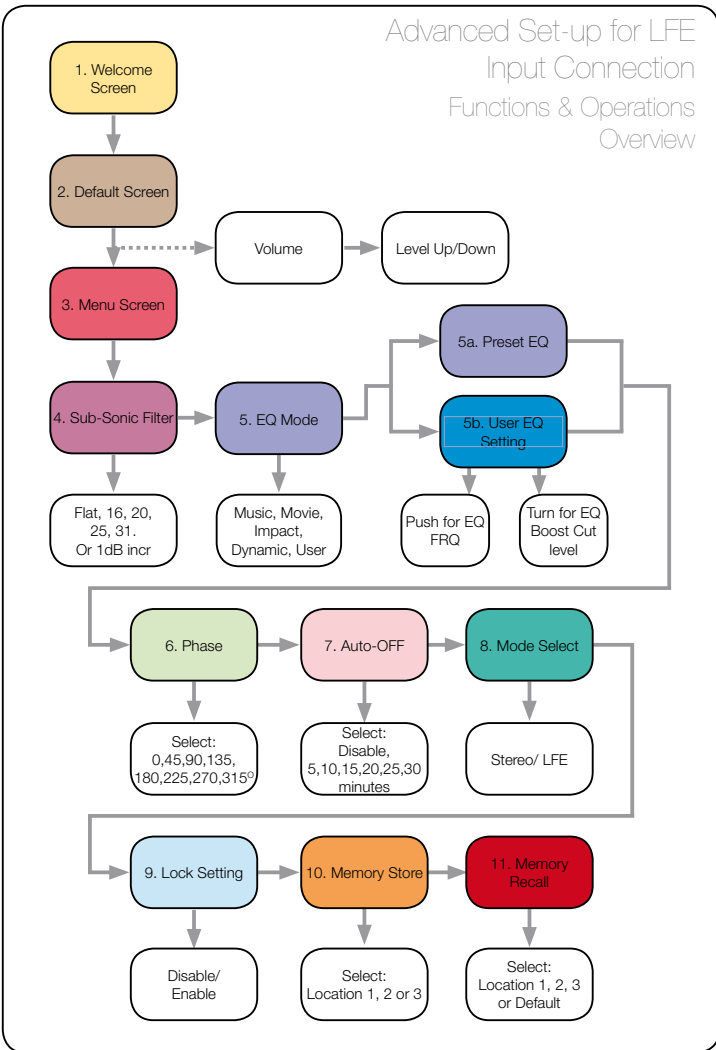

3. All screens will time out in 10 seconds. No settings will be lost UNLESS the PLW-15 is powered off or put into stand-by mode.

Press

4. Subsonic Freq. <- 16Hz >

Subsonic Filter Frequency

ENTER

10

5. Information only

Graphic EQ Curves

5a. Subsonic Freq. <- 16Hz >

Select: Movies, Music, Dynamic, Impact, User

EQ Mode <- * Music >

10

5b. EQ Mode <- * User >

ENTER

User EQ Setup >

= 0 dB

User EQ 20 Hz > 0.0dB

Level

Frequency

ENTER

10



6.

EQ Mode
← * Music →

OR

Phase Shift (Degrees)

0
45
90
135
180
225
270
315

Phase
* 0° →

OR

ENTER

10

9.

Mode Select
* Stereo →

OR

Select:
Disable
Enable

Lock Setting
* Disable →

OR

ENTER

10

Using 12v Trigger

Music 2-CH

Without Using 12v Trigger

Music 2-CH

7

10.

Lock Setting
* Disable →

OR

Select:
Mem 1
Mem 2
Mem 3

Memory Store
Choose →

OR

Memory Store
← Mem 1 →

OR

ENTER

11

7.

Phase
* 0° →

OR

Time Scales (Minutes)

5
10
15
20
25
30
Disable

Auto Off
← * 15 min →

OR

ENTER

10

11.

Memory Store
← Mem 1 →

OR

Select:
Mem 1
Mem 2
Mem 3
Default

Memory Recall
← Mem 1 →

OR

ENTER

11

8.

Auto Off
← * 15 min →

OR

Select:
LFE
Stereo

Mode Select
* Stereo →






OR

ENTER

10

Advanced Set-up for Stereo/ 2 Channel Input Connection

Functions & Operations Overview

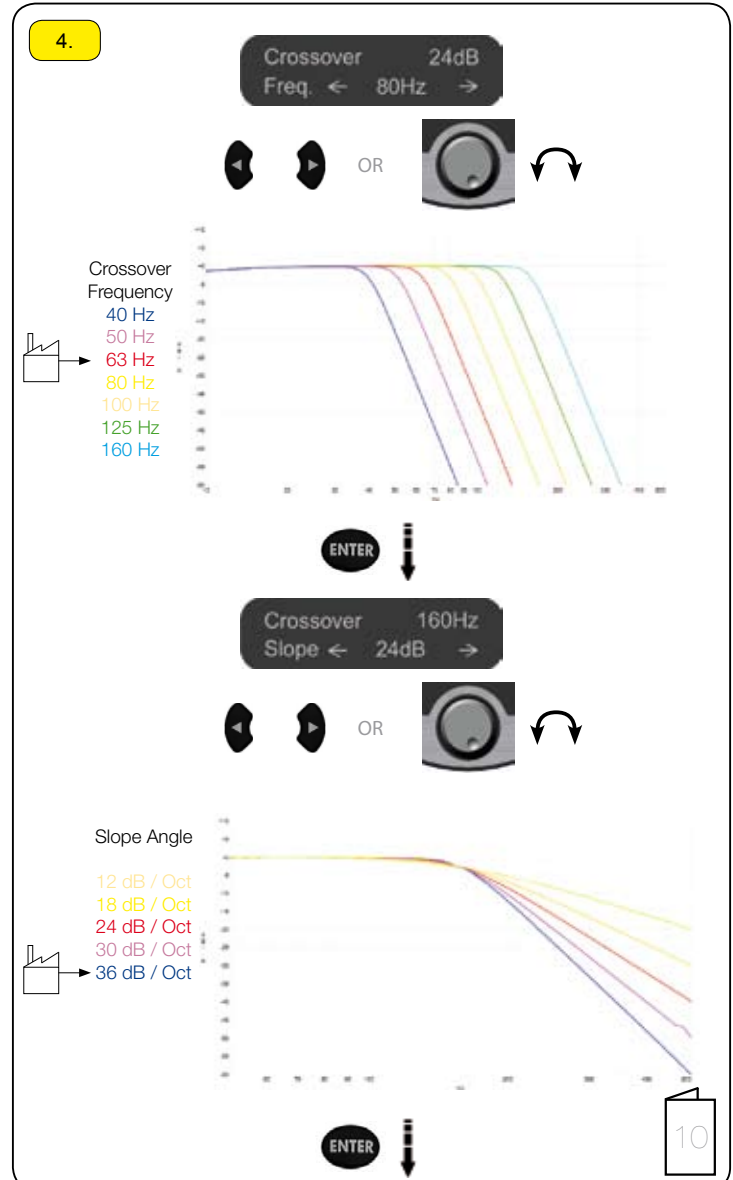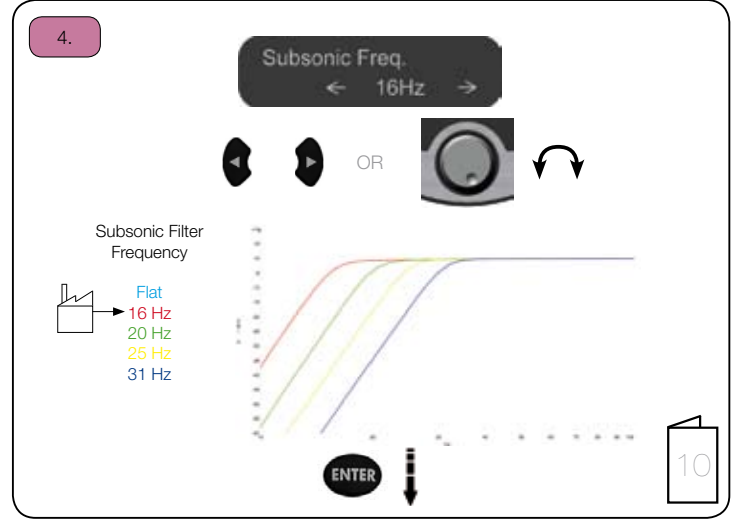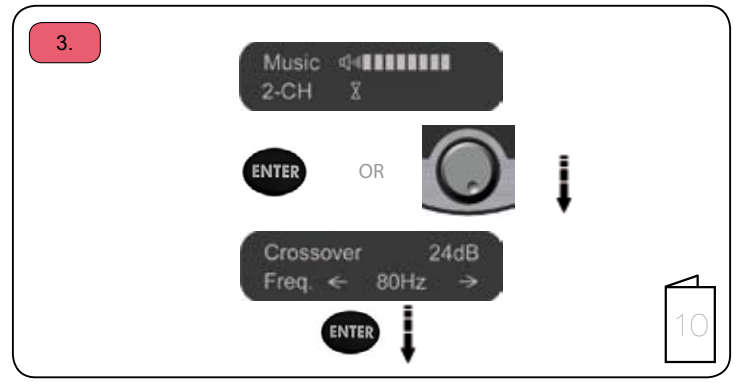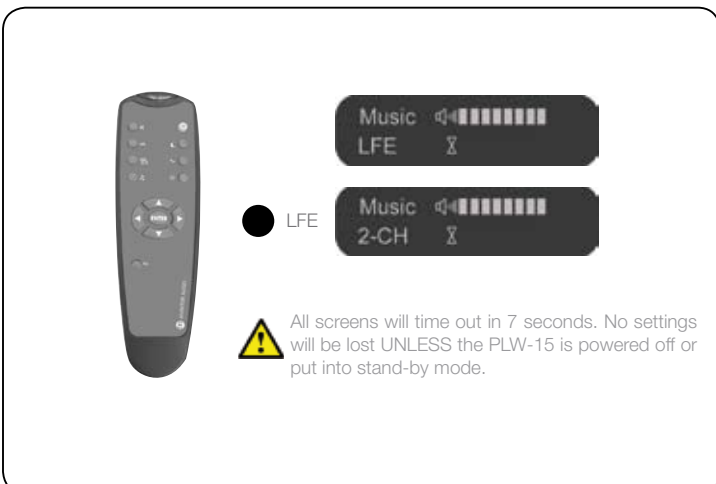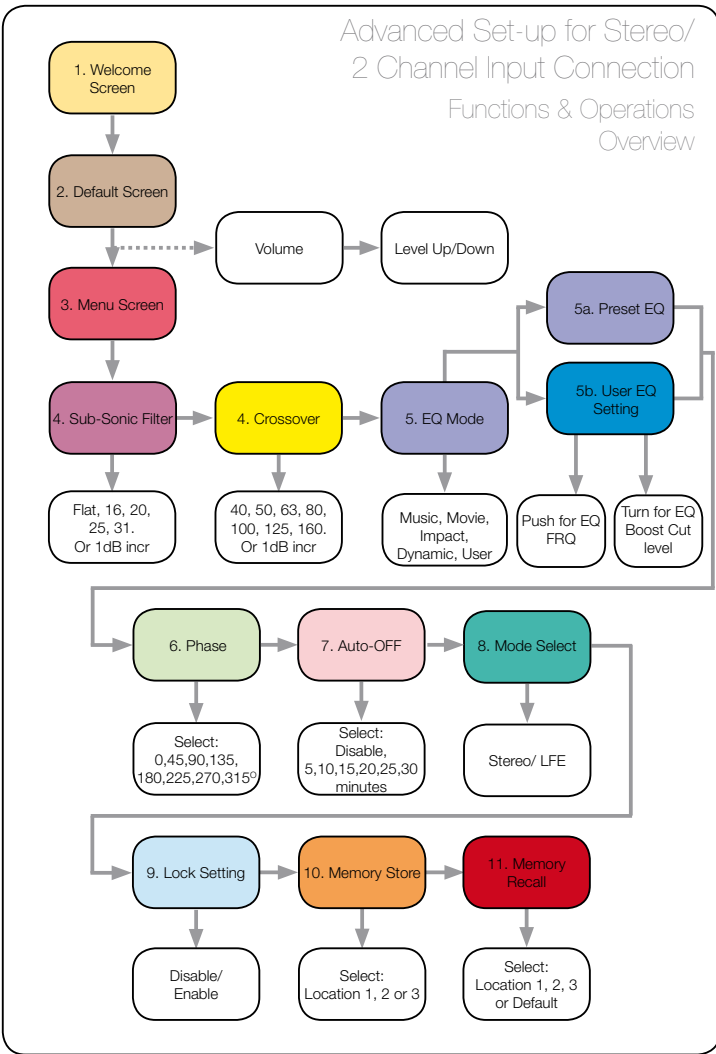



Please refer to step **5.** of the
LFE Advanced Set-Up (page 3) to
continue to the next stages of
setting up your PLW-15.





Monitor Audio Ltd
Unit 2, 24 Brook Road
Rayleigh, Essex
SS6 7XL
England
Tel: 01268 740580
Fax: 01268 740589
Email: info@monitoraudio.co.uk

www.monitoraudio.co.uk
Designed in the United Kingdom

Version 1